


GLOSSWOOD®

PREFINISHED TIMBER LINING BOARDS
& ACOUSTIC PANELS

HOW TO INSTALL GLOSSWOOD PREFINISHED LINING BOARDS


Glosswood Lining boards for walls and ceilings come sealed on four sides in the colour of your choice for easy installation. Our Lining boards can be fixed to existing walls and ceilings (level and in good condition), plus rafters, joists, trusses, wall framing and battens attached to masonry walls. No sanding, varnishing or painting required.

WHAT YOU WILL NEED

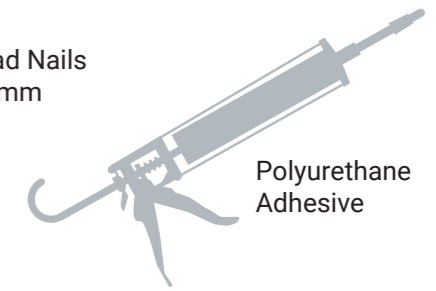


Measure up to determine how many timber Lining boards you will need. Coverage of a 90mm board is 86mm: coverage of a 130mm board is 126mm Please note recommended batten spacing for these boards is 450 - 600mm.


Boards Per Pack	Board Size	Length	Coverage Per Pack
8	90 x 9mm	2.4m	1.65 sqm
10	90 x 9mm	3.6m	3.1 sqm
10	130 x 10mm	3.6m	4.5 sqm
Trims			
Quad	19 x 19mm	3.6m	N/A
Coverstrip	35 x 10mm	3.6m	N/A

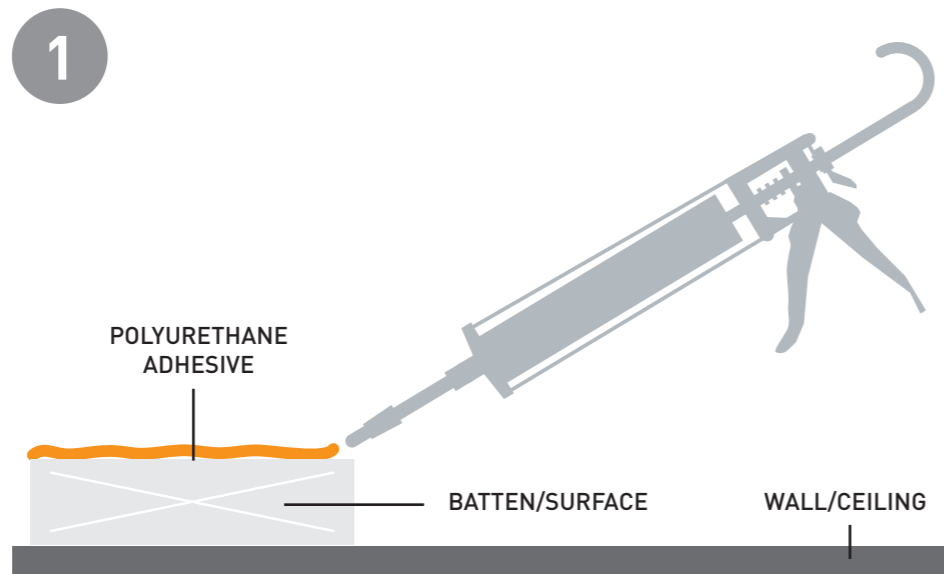


Apply polyurethane adhesive to batten/surface.

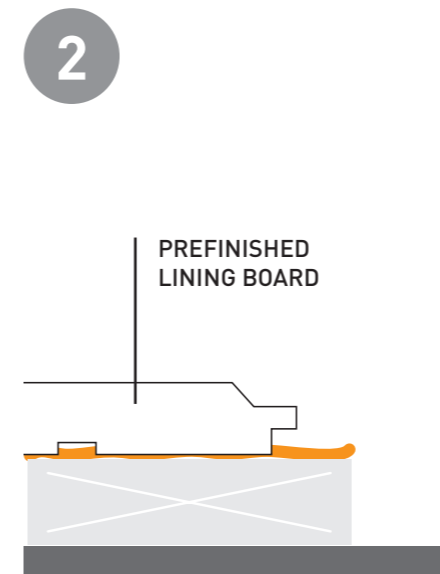


Place first lining board on batten/surface with tongue facing outwards.

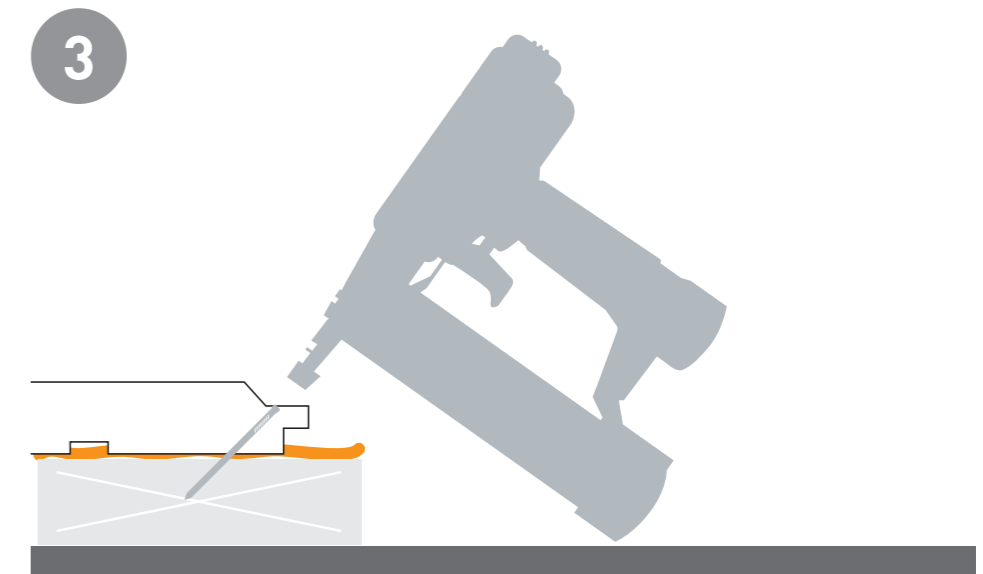


Nail through the protruding tongue on a 45-degree angle.

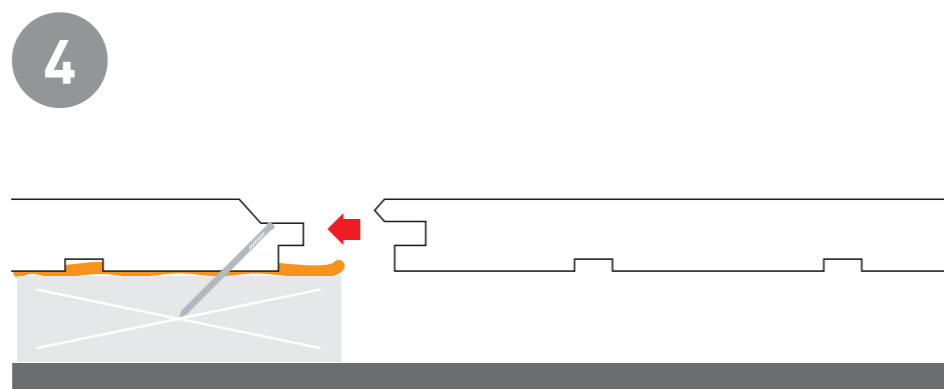

Slide in next lining board and continue with adhesive and nailing until you have lined your surface.

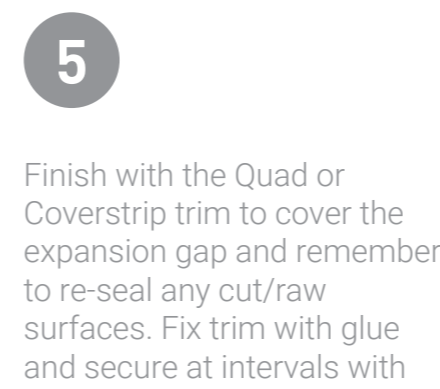

Finish with the Quad or Coverstrip trim to cover the expansion gap and remember to re-seal any cut/raw surfaces. Fix trim with glue and secure at intervals with brad gun.

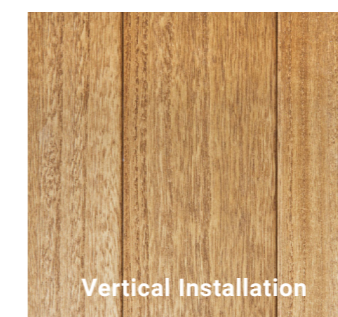

INSTALLATION TIPS

- Ensure a straight level surface is achieved.
- Stagger the Boards so that there is not a straight line of end-matched boards.
- Seal the ends of each cut length.

*Refer to Installation & Maintenance Guide before installing Glosswood